



SPINELOCK™ INSTALLATION

LOOSEN BOTH BOLTS ON CLAMP, ROTATE ARMS 90° TO ALLOW CLEARANCE FOR SADDLE RAILS. POSITION CLAMP ON SADDLE RAILS, ROTATE ARMS OVER RAILS. TIGHTEN BOLTS TO 7 NM.

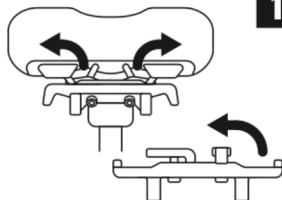

1


MOUNT BAG TO CLAMP BY ALIGNING HOLES FOR PIN. INSERT PIN THROUGH PLASTIC BASE AND METAL HOLES. PUSH PIN ALL THE WAY IN.

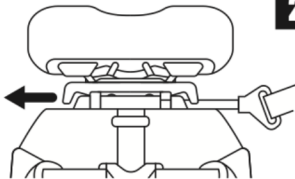

2

FASTEN SIDE STRAP LOOPS OVER METAL HOOKS AND TENSION SIDE STRAPS. ATTACH FRONT WEBBING STRAP AROUND SEATPOST.

WARNING: SIDE COMPRESSION STRAPS MUST BE ATTACHED AND FIRMLY TIGHTENED BEFORE USE.

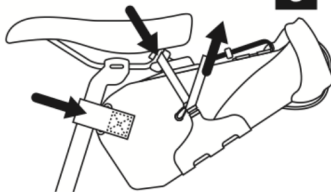

3

VISIT REVELATEDESIGNS.COM/INSTRUCTIONS FOR MORE INFORMATION.